

How to setup Prepaid Wi-Fi Hotspot

1. Log in to the EasyRoute device on IP address **192.168.1.1** as a *Admin*: User: **admin** Password: **admin**
2. Setup time server. Go to menu **SETUP → Network → SNTP** fill in the IP address of some NTP (network time protocol) server plus setup your time zone.
3. Enable Wi-Fi in menu: **SETUP → Wireless** (you can do the same in **WIZARD** menu).
4. Enable Hotspot in menu: **SETUP → Hotspot → Basic** setup default values of the connection: Time of connection; Ticket valid time.

Enable billing: you can define the price of connection. Dified price = cost of connection per ONE hour.

Note: when admin enable Hotspot his MAC address will be automatically fill in the **Trustees**. Admin would not have to use the code to access the Internet. To use the code delete your MAC address from Trustees.

5. You can start sale/generate the codes:
 - In *Admin* account: **SETUP → Hotspot → Sale** use the button Sale
 - In *Operator* account: User: *operator* Password: *operator* menu **SALE**
6. Generated code can be send to the customer over SMS or can be written on a piece of paper/bill.

The screenshot displays the 2N EasyRoute web interface. At the top, the user is logged in as 'operator (User)'. The main navigation bar includes '2N EasyRoute', language options (Tr, En, Cz), and icons for 'SETUP', 'SMS', and 'STATUS'. A sidebar on the left lists 'SALE', 'STATUS', 'SETUP', and 'LOGOUT'. The central 'SALE' panel shows a 'Ticket created' notification. It includes input fields for 'Time of connection' (30 Min) and 'Ticket valid time' (15 Min). A 'Ticket preview' section displays a 'Serial' of 0404, a 'Code' of 805939, and a 'Price' of 10 CZ. An 'SMS notify' field with a 'Send' button is also present. A 'Sale' button is located in the bottom right corner of the panel.